

Electric Oven

User's Manual

Model: ZOF3220

Important safety instructions

Please read all instructions carefully before using your electric oven for the first time.

These warnings are provided for safety reasons. Please read carefully before installing or using this product.

This product is for home users only and must not be used for any other purpose, such as in non-domestic or commercial environments.

 
- The temperature of the accessible surface will be very high when the product is working.
- You must pay attention to safety to get the best results.
- This product must use the voltage marked on the nameplate of the product. Incorrect voltage will invalidate the warranty.
- Be sure to disconnect the power supply when the product is not in use.
- This product can't be operated with external timer or remote control system.
- Do not expose this product to rain or moisture.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children younger than 8 years old are not allowed to use this product.
- Cleaning and user maintenance shall not be made by children unless they are over 8 years old and are supervised.
- This product is for indoor use only.
- Please keep the product and its power cord out of the reach of children under 8 years old.
- Do not use this product for other purposes.
- To prevent electric shock, do not immerse the power cord, plug or product in water or other liquids.

The surface of the product tends to become hot during use.


- Unplug the plug from the socket when the product is not in use and before cleaning. Clean it after the temperature drops to room temperature.
- Do not operate when the power cord or plug is damaged, the product is malfunctioning, or the product is damaged in any way. Please consult the salesperson of the retail store where you purchased the product for relevant advice.
- Do not allow wires to hang on the product surface or contact hot surfaces.
- Do not place this product on or near hot gas or electric burner, or in heating furnace.
- Be sure to connect the plug to the power cord.
- To disconnect the power, pull the plug from the wall socket.
- Do not disconnect the power source by pulling the power cord. Hold the plug and pull it out.
- Do not immerse the product, power cord or plug in water.
- This product is equipped with a short-circuit power cord to reduce the risk of tripping.
- Do not put items wrapped in aluminum foil into the oven.
- Before putting the bread in the oven, remove all protective packaging.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similar personnel to avoid danger.
- Do not use this product in a bathtub or sink or any container that contains water or liquid.
- If the product falls into water, do not touch the product. Before taking it out, disconnect the power supply and drain the water. Do not use the product again until it is checked by a qualified service agent.
- The back surface of the product should be placed close to the wall.
- For detailed information on how to clean food-contact surfaces, please refer to the "Cleaning" section.

Precautions for placement

- Use the electric oven on a heat-insulated surface and keep a distance of at least 10-15cm around the electric oven.
- The electric oven should be placed in a dry environment and should not be used outdoors.
- In order to avoid oil fumes from contaminating furniture or causing fires, keep a certain distance from the product to the walls and cabinets.
- It is strictly forbidden to use the electric oven near flammable materials or heat sources. Keep away from curtains and the like to prevent fire.

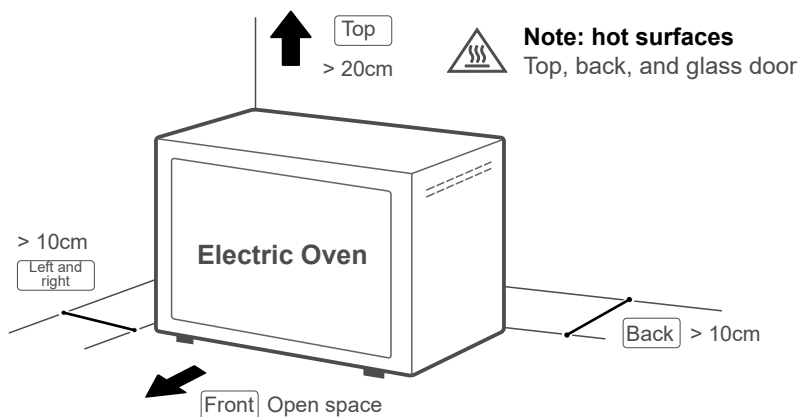

 There are safety barriers on the back of the oven to prevent the oven from contacting walls and other objects and to maintain a safe distance.

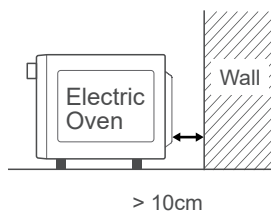

ZANUSSI

Quick Start Guide


ZOF3220

Please read this manual carefully before use and keep it properly.

Product Overview

Note

 - As the product is subject to upgrade, please refer to the actual product if it has any difference from the picture below
- Please refer to the safety distances marked in the picture to place the product
- When using the rotating grill function (chicken), the lower tube does not work. Please put the oil pan on the lower heating tube to collect the oil; when using functions that the lower tube works, do not put the oil pan directly on the heating tube
- When picking up the chip tray assembly, please use the plastic handle. Do not touch the metal part in order to prevent burns

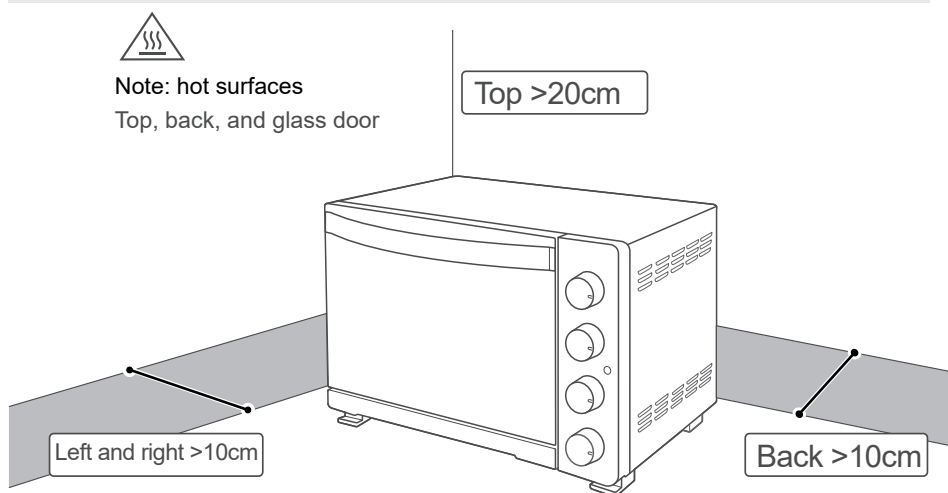


Bakeware




Chip tray assembly
(in the body)



 Grill



Oil pan

 

Pick-up clamp



Rotating fork









Pick-up bracket

Control panel introduction

Upper tube temperature adjustment knob

When heating food, please turn to more than 70°C

Function selection knob

-  Lower tube works
-  Upper tube works
-  The upper and lower tubes work simultaneously
-  Hot air convection
-  Rotating grill
-  Low temperature fermentation

Lower tube temperature adjustment knob

 
When heating food, please turn to more than 70°C

Working status indicator

During use, the working status indicator is always on
The indicator light is off when the task is over

Time adjustment knob

If the timer is <10 minutes, turn the time knob to >10 minutes, and then turn the time knob back to the desired time position

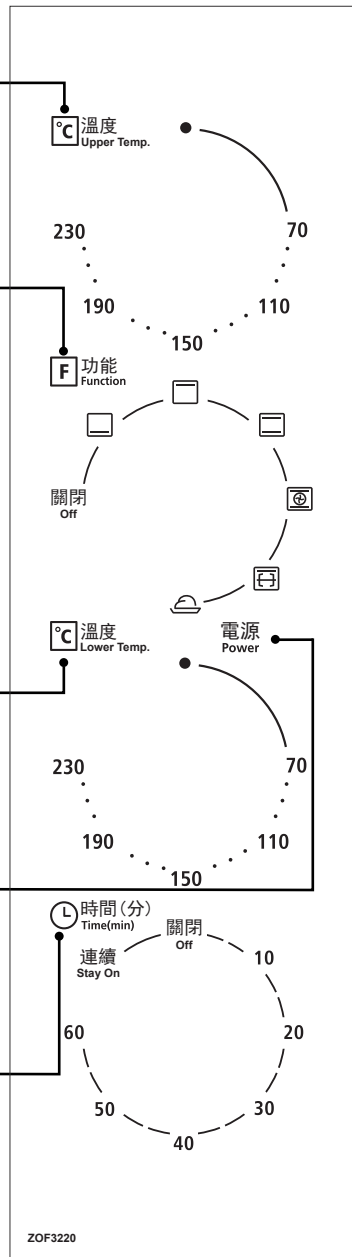


First use

Note


A layer of anti-corrosion coating is applied on the heating tube. It is normal if there is strange smell or smoke when it is used for the first time.

It needs to be operated for 15 minutes for the first time to remove the anti-corrosion protective coating in the heating tube and cavity

 
Method of operation

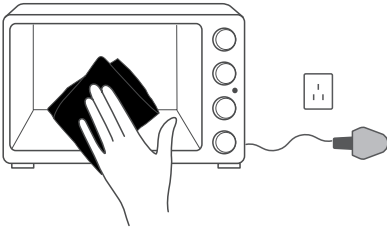

 
1. With the power off, wipe the inside of the oven with a damp cloth; do not wipe the heating tube

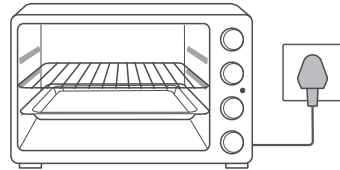

 2. Put the baking tray and grill into the oven and plug in the power supply

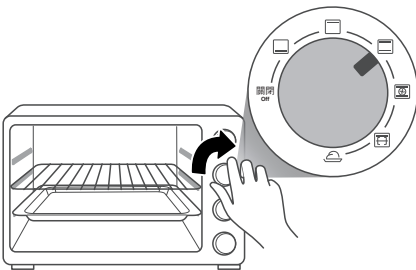

 3. Use the upper and lower tube function, adjust the temperature to the highest and operate for 15 minutes

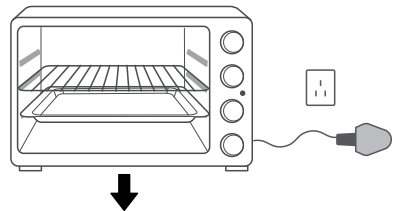

4. Unplug the power supply, and use it normally after complete heat dissipation

Operation flow

 
Note

- When the [Stay On] position is selected, the electric oven is always on, and the working status indicator turns on. To stop the work, you need to manually turn the time knob back to the [OFF] position, or else the oven will continue to work, which may cause a fire
- The product of the enamel furnace cavity may make a slight noise during use, which is normal
- When the fermentation function is selected, turn the time knob to start working. The temperature knob doesn't have adjustment function



1. Insert the power supply,
220V AC


2. Select the function

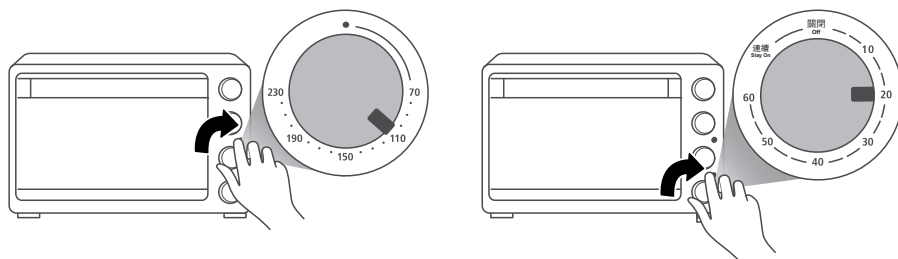


3. Adjust the temperature

4. Adjust the time and start
working

 
Use of rotating fork

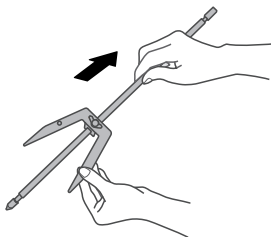

 
1. Insert the fork into the shaft into the shaft

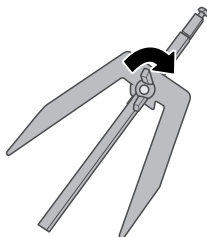

 
2. Rotate the screw to fix the fork

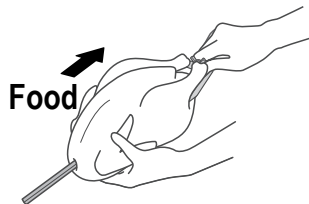

 
3. Pass the shaft through the food and secure one side with the fork

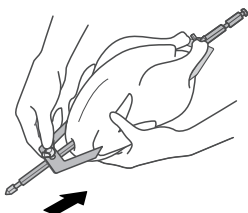

 
4. Insert another fork into the shaft and press the food tightly

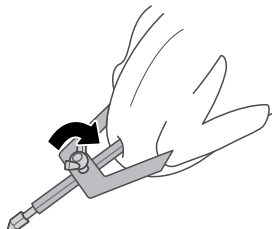

 5. Rotate the screw to fix the fork

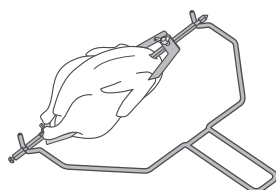


 6. Use the pick-up bracket to put the food into the oven

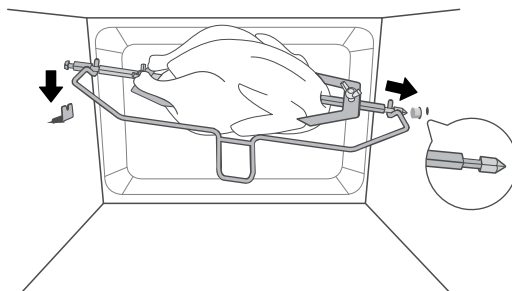

7. Insert the pointed end of the shaft into the hole on the right side of the cavity, and then place the square end in the groove on the left side of the cavity

 Principle of heating tube

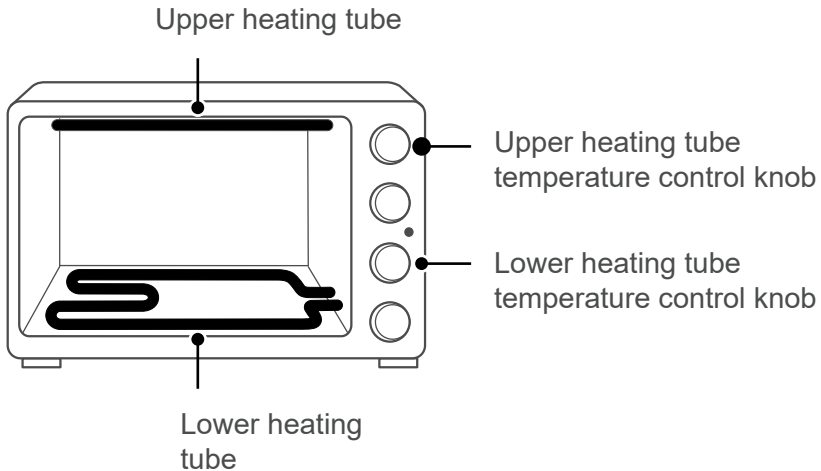


The following 3 cases of heating tubes are normal

- ☐ The upper tube works - only the upper tube turns red
 - ☐ The lower tube works - only the lower tube turns red
 - ☐ Both upper and lower tubes work - Both upper and lower tubes turn red
1. The oven uses intermittent heating to control the temperature of the cavity. It is normal that the heating tubes turn red and dark during the working process.
 2. The metal heating tubes will show obvious dark red only when the surface temperature reaches 600°C or higher. If it can work normally, it is normal that the heating tube does not turn red and it does not affect normal use.
 3. Due to the process characteristics, the U-shaped heating tubes usually turn red slightly or are not red in working condition, but it is still in normal working condition.


Cleaning instructions

Note

 
Do not use sharp cleaning tools, hard brushes or corrosive cleaning products, so as not to damage the product and accessories

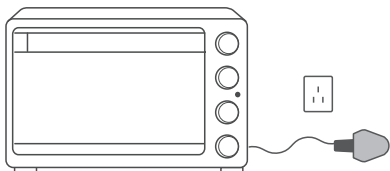

 
Unplug and wait for the oven to cool down completely.

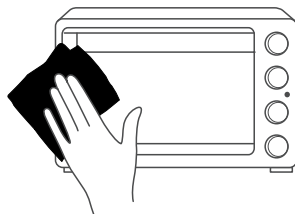

 Wipe with a damp cloth moistened with neutral detergent.

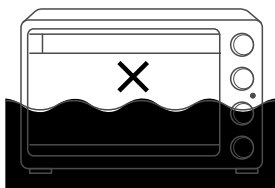

 Do not immerse the oven into water or other liquids.

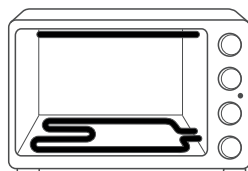

Clean the residual stains on the surface of the heating tube after the power is turned off and the heating tube cools down.

Product parameters

Model: ZOF3220

Volume	32L
Rated voltage/frequency	220V~50Hz
Net weight	9.7kg
Rated power	1650W
Dimensions (W x D x H)	498x399x330 mm

ZANUSSI

電烤箱

說明書

型号：Z0F3220

使用前請仔細閱讀本說明書，並妥善保存
產品請以實物為準，圖片僅供參考

重要安全說明

在初次使用您的電烤爐前請認真閱讀所有說明。

這些警告是出於安全考慮而提供的，請在安裝或使用本產品前仔細閱讀。

本產品僅供家庭用戶使用，不得用於任何其他目的或用途，例如非家用或商業環境。

 
- 產品工作時，可觸及表面的溫度會很高。
- 您必須注意安全以獲得最佳使用效果。
- 本產品必須使用本產品底座銘牌上顯示的電壓。如未能使用正確的電壓將會使質保失效。
- 不使用該產品時，務必斷開本產品的電源。
- 本產品不能使用外部計時器或遠端控制系統來操作本產品。
- 請勿將該產品暴露在雨中或潮濕環境中。
- 在適當人員監督下或給予如何安全使用本產品的訓示，並讓其瞭解涉及的風險，8歲以上兒童、身體官能或心智能力衰退人士、缺乏相關知識或使用經驗人士（包括孩童）方可使用本產品。
- 8歲以下兒童不得使用本產品。
- 兒童不得進行本產品的清潔和維護，除非他們年齡超過8歲並受到監督。
- 本產品僅供室內使用，請勿在室外使用。
- 請將該產品及其電源線放在8歲以下兒童無法觸及的地方。
- 請勿將該產品用作其它用途。
- 為防止觸電，請勿將電源線、插頭或產品浸入水中或其他液體中。

產品表面在使用過程中容易變熱。


- 不使用時和清潔前從插座上拔下插頭。在溫度下降至室溫後再進行清潔。
- 請勿在電源線或插頭損壞或產品出現故障或以任何方式損壞產品的情況下進行操作。請諮詢您購買產品的零售店銷售人員以獲取相關建議。
- 請勿讓電線懸掛產品表面或接觸灼熱表面。
- 請勿將本產品放置在熱氣體或電子燃燒器上或附近，或加熱爐中。
- 務必將插頭與電源線連接。
- 如要斷開電源，請從壁插座上拔下插頭。
- 請勿拉拽電源線斷開電源。抓住插頭將其拔下。
- 請勿將產品、電源線或插頭浸入水中。
- 本產品配有短電源線以降低被絆倒的危險。
- 請勿將鋁箔包裹的物品放入焗爐。
- 在將麵包放入烤箱之前，請取出所有保護性包裝。
- 如果電源線損壞，務必由廠家、服務代理商或類似人員進行更換以避免危險。
- 請勿在浴缸或水槽或任何盛有水或液體的容器內使用本產品。
- 如果該產品落入水中，請勿觸摸產品。在取出該產品前，請先斷開產品電源並將水排出。在合格的服務代理商檢查之前，請勿再次使用該產品。
- 產品的後表面應靠牆放置。
- 有關如何清潔與食物接觸的表面的詳細訊息，請參閱“清潔”部分。

擺放注意事項

- 將電烤箱放置隔熱的平面上使用，並在電烤箱周圍至少保持10-15cm的距離。
- 應將電烤箱放置在乾燥的環境中，不可在室外使用本產品。
- 為避免產品工作中油煙污染傢俱或發熱引起火災，產品要和牆壁、櫥櫃保留一定距離。
- 嚴禁將電烤箱放置在易燃物或熱源附近使用，應注意遠離窗簾等或類似物品，以防造成火災。

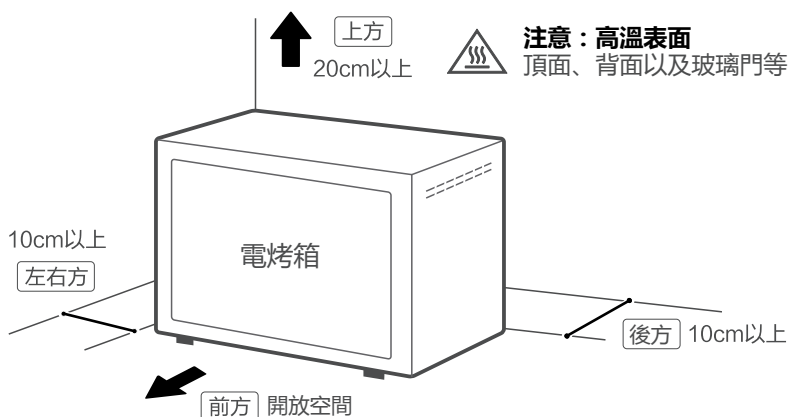

烤箱背面有安全阻隔部件，以防止烤箱與牆壁等物體接觸，保持安全距離。

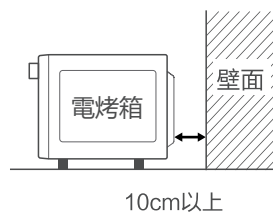 

ZANUSSI

快速入門指南



ZOF3220

使用前請仔細閱讀本手冊，並妥善保管

產品簡介

⚠ 备注

  - 由於產品在不斷升級，如實物與下圖存在差異，請以實物為準
- 請參考圖示中標記的安全距離擺放產品
- 當使用旋轉燒烤功能(烤雞)時，下管不工作，請把接油盤放置在下發熱管上接油;使用包含下管工作的功能時，請勿把接油盤直接放置在工作中的發熱管上
- 取放屑盤元件時，請通過塑膠提手部分操作，不要接觸金屬部分，以防燙傷

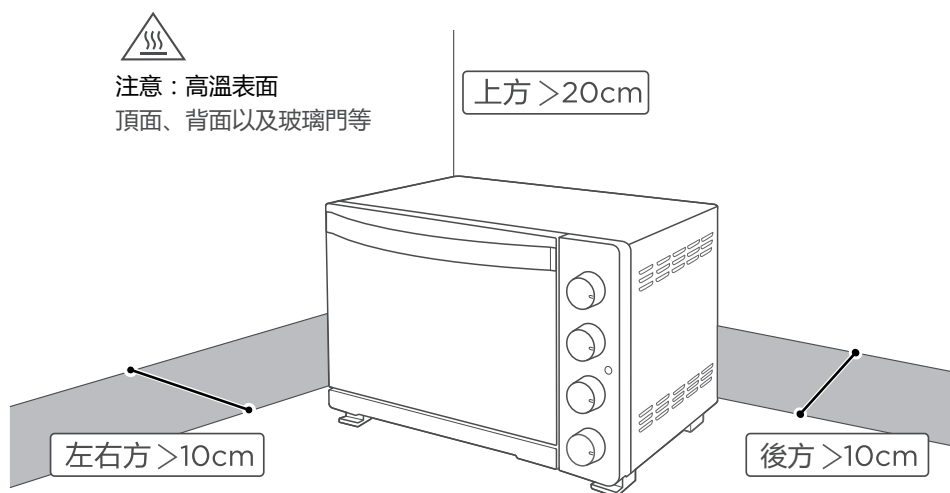


烤盤




屑盤組件(機身內)



 烤架



接油盤

 

取物夾



旋轉烤叉









取物支架

控制台介紹

上管溫度調節旋鈕

加熱食物時，請旋至超過70°C範圍

功能選擇旋鈕

-  下管工作
-  上管工作
-  上下管同時工作
-  熱風對流
-  旋轉燒烤
-  低溫發酵

下管溫度調節旋鈕

 
加熱食物時，請旋至超過70°C範圍

工作狀態指示燈

使用過程中，工作狀態指示燈常亮
任務結束，指示燈熄滅

時間調節旋鈕

若定時<10分鐘，請將時間旋鈕轉至>10分鐘後，再將時間旋鈕擰回想要的時間位置

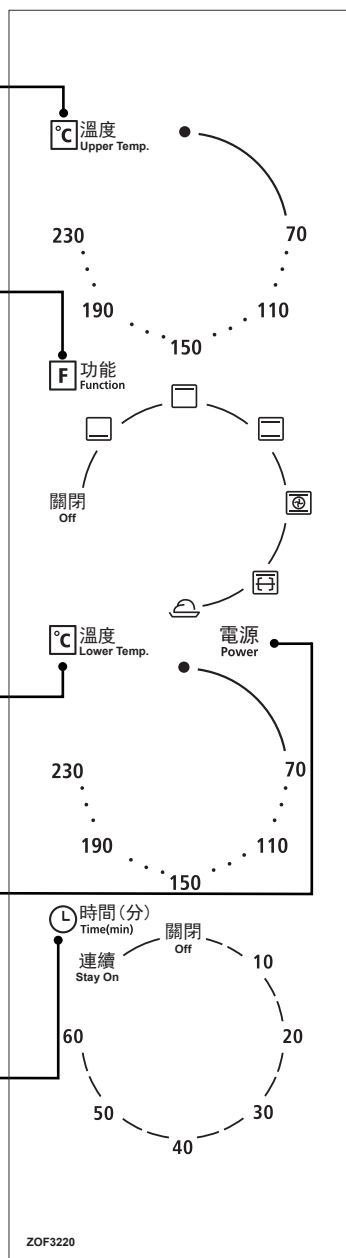


首次使用

⚠ 注意


發熱管上塗有一層防腐蝕保護塗層，初次使用可能會有異味或油煙，屬於正常現象

首次使用需空燒15分鐘，以去除發熱管和腔體內的防腐蝕保護塗層

 
操作方法

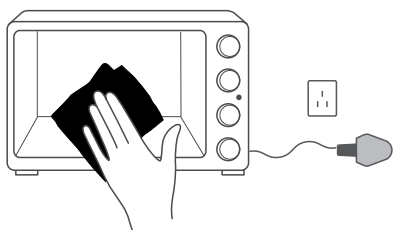


- 1、在斷電狀態下，用濕布將烤箱內擦拭一遍，請勿擦拭發熱管

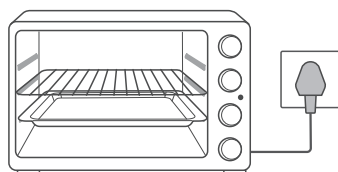 

- 2、將烤盤、烤架放入烤箱內，插上電源

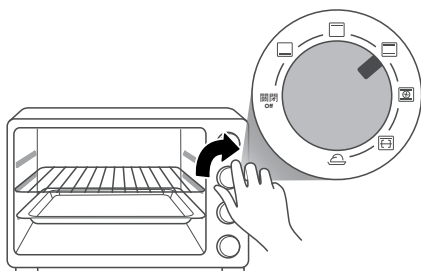 

- 3、使用上下管功能，溫度調至最高檔空燒15分鐘

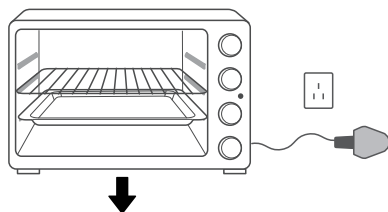 


- 4、拔掉電源，待散熱完全冷卻後便可正常使用


使用流程

⚠ 注意

 
- 選擇【連續】檔位時，電烤箱處於長通狀態，工作狀態指示燈點亮，如需結束工作，需手動將時間旋鈕擰回【關閉】檔，否則烤箱將一直工作下去，時間過長，可能引起火災
- 搪瓷爐腔的產品，使用過程中可能會出現輕微聲響，這是正常現象
- 選擇發酵功能時，轉動時間旋鈕即開始工作，溫度旋鈕不起調節作用

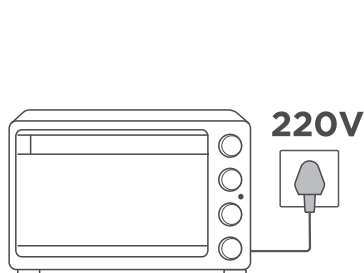


1、插入電源，220V交流電

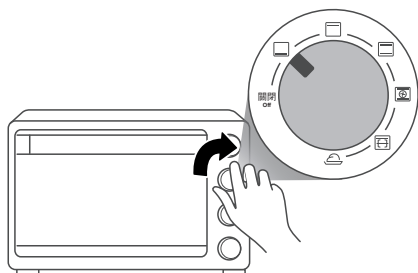 

2、選擇功能

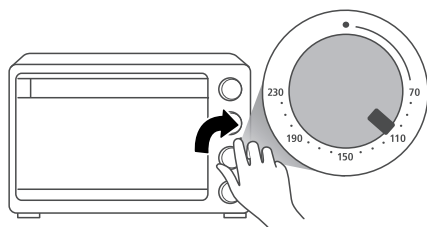 


3、調節溫度

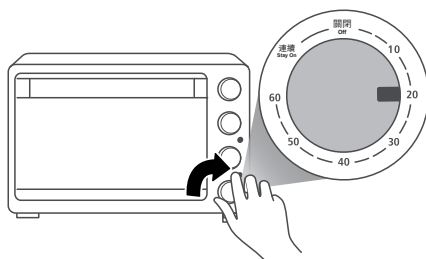 


4、調節時間開始工作

 
旋轉烤叉使用

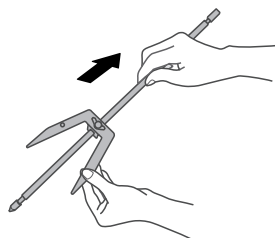

 
1. 將烤叉穿入烤軸

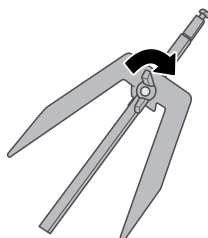

 
2. 在合適位置旋轉螺絲將烤叉固定

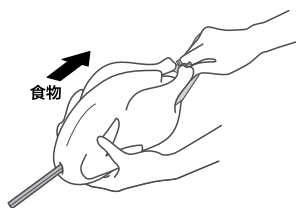

 
3. 將烤軸穿過食物並用烤叉固定一邊

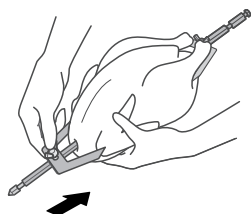

 
4. 將另一個烤叉穿入烤軸，壓緊食物

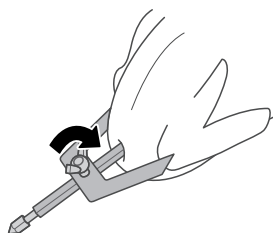

 5. 旋轉螺絲將另一個烤叉固定

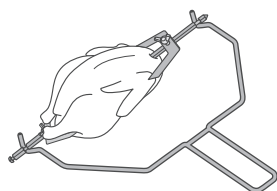


 6. 使用取物支架將穿好的食物放入烤箱

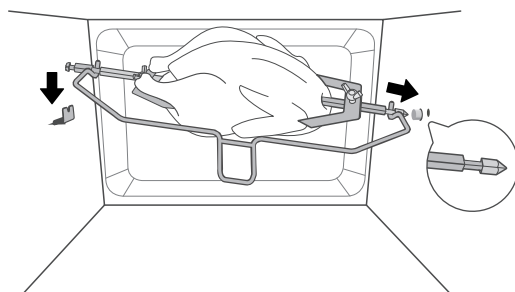

7. 先將烤軸尖頭一端插入腔體右側孔位，再將方頭一端搭在腔體左側凹槽內

 發熱管原理說明

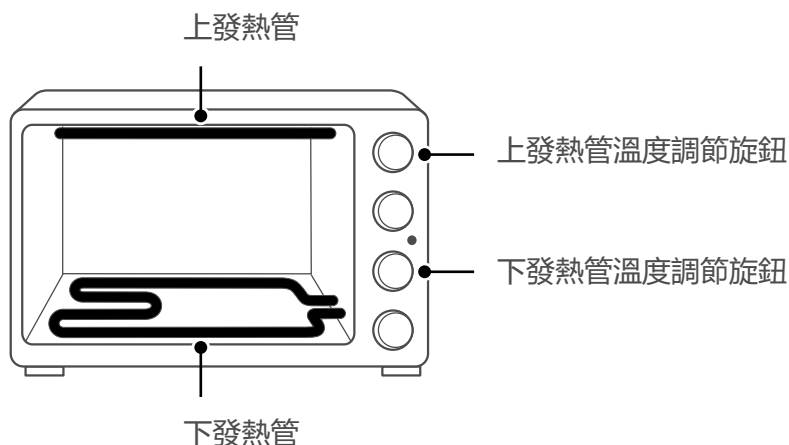

以下3種情況發熱管屬於正常工作

 
- ☐ 選擇上管工作 - 表現為上管發紅，下管不紅
- ☐ 選擇下管工作 - 表現為下管發紅，上管不紅
- ☐ 選擇上下管都工作 - 表現為上下管都發紅

1. 烤箱採用間歇式的加熱原理控制腔體溫度，以上工作過程中發熱管忽紅忽暗，均為正常現象
2. 金屬發熱管表面溫度達到 600°C 以上，才會呈現明顯的暗紅色，若能正常工作，發熱管不發紅屬於正常現象，不影響正常使用
3. 由於U型發熱管工藝特性，發熱管處於工作狀態時，通常僅微微發紅或不發紅，實際仍處於正常工作狀態


清潔說明

⚠ 注意


請不要使用尖銳清潔工具、硬毛刷和帶腐蝕性清潔用品，以免損傷產品機身及配件

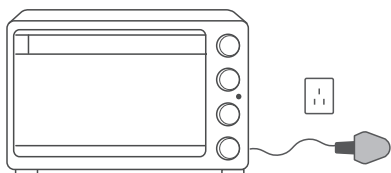


拔掉插頭，待烤箱
完全冷卻

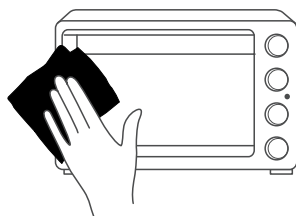 

用沾有中性清潔劑
的濕布擦拭

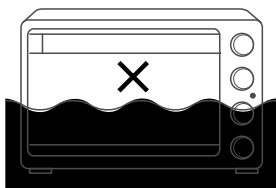 

嚴禁將烤箱浸入水
或別的液體中

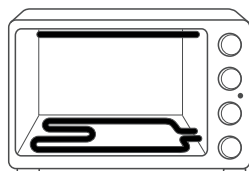 

斷電且發熱管冷卻
後清理發熱管表面
殘留的污漬

產品參數

產品型號：ZOF3220

容積	32L
額定電壓/頻率	220V~50Hz
淨重	9.7kg
額定功率	1650W
外形尺寸(寬x深x高)	498x399x330 mm

