



抽油煙機 使用說明書

OPERATING INSTRUCTION

MODEL

ZHT910X

(使用前，請先詳細閱讀此說明書)

Before using this range hood, please read these instructions completely.

目錄 / Index

注意事項	P1
部件名稱	P2
安裝前須知	P3-P5
操作介紹	P6
保養與清潔	P7
油機尺寸	P8
規格性能表與配線圖	P9

Safety Notice	P1
Part List	P2
Installation Guidelines	P3-P5
Operation Instruction	P6
Maintenance and Cleaning	P7
Hood Measurement	P8
Specification & Wiring Diagram	P9

注意事項

重要說明

為安全起見，初次使用產品前請先細閱本說明書，並保存本說明書，以便作參考之用。


本產品只供家居使用，請必須依照本說明書內的指示安裝及操作。

** 安裝前請先撕除抽油煙機機箱外的保護膠膜。

1. 請依照本說明書內的指示安裝及操作。
2. 維修抽油煙機前，請務必切斷電源。
3. 維修抽油煙機時，請戴上橡膠手套。
4. 請勿直接噴水在抽油煙機上。
5. 當與易燃氣體一起使用時，廚房請保持良好的通風，以避免危險。
6. 不可在抽油煙機下方直接燃燒。
7. 請勿與其他易燃氣體共用排氣通道。
8. 孩童不可玩耍此抽油煙機。且不可在無人監督下操作此抽油煙機。
9. 若未依此說明書執行清潔可能產生危險或引起火災。
10. 不可在抽油煙機下方點燃酒精等易燃物品。
11. 在煮食過程部份零配件有可能會變燙。
12. 排出的油煙不得藉由瓦斯或其他燃料之排氣通道釋出。
13. 排出的油煙程序需符合相關的排放空氣法規。
14. 若電源線損壞，請勿操作抽油煙機。必須由製造廠或服務處或具有類似資格的技術人員更換以避免危險。
15. 不可使用此抽油煙機的人:生理、感官或心智能力不足(包括兒童)，或缺乏相關經驗和知識。除非他們是在被監督或有其他具相關訓練的人員指導下方可使用。
16. 清潔、維修抽油煙機或更換燈膽前或卸下抽油煙機前請切斷電源。
17. 此抽油煙機需安裝於煮食爐上方65~75厘米處。
18. 此抽油煙機必須接地。
19. 為避免抽油煙機積油產生危險或引起火災，每月至少清洗兩次保護網、扇葉和其他容易積油的零配件。

部件名稱

ZHT910X

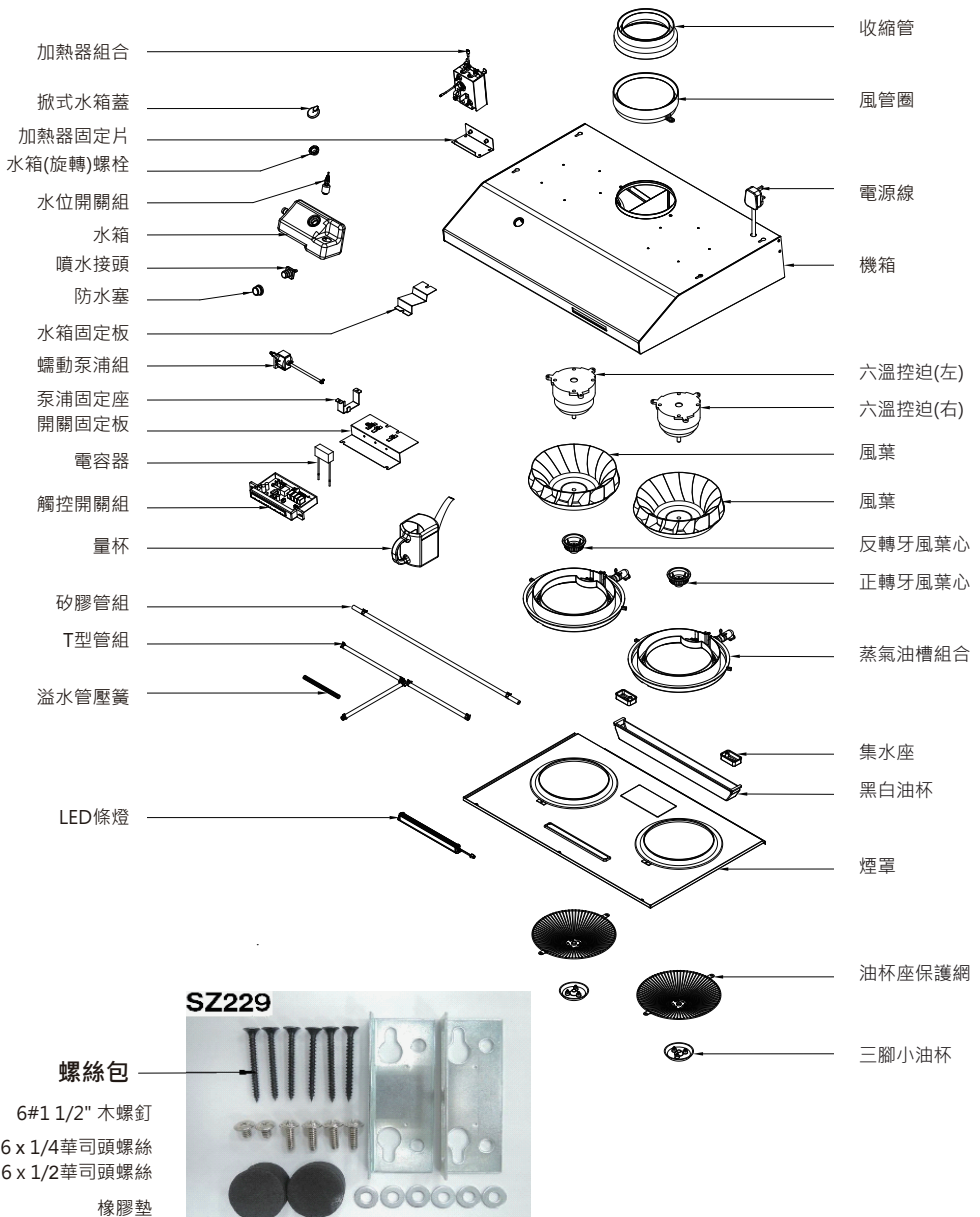

安裝前須知

(一) 安裝前檢查

1. 包裝材料 (如：塑膠袋、發泡膠等) 有潛在性的危險請勿讓孩童接觸。
2. 請由受過專業訓練的技術人員進行安裝。
3. 安裝前請確認規格線路標籤上所列示的電壓符合您家的電壓。
4. 安裝前接上電源，檢查照明、摩打及開關是否正常。
5. 安裝前檢查下列附件：

ZHT910X


- a. 風管圈 (6" 轉 6" x 1、6" 轉 5" x 1)
- b. 油杯 2 個、大油杯 1 個
- c. 說明書 1 本
- d. 螺絲包 1 組 (大吊掛片 x 2、3/16 x 1/4 華司頭螺絲 x 2、3/16 x 1/2 華司頭螺絲 x 4、6# 1 1/2" 木螺釘 x 6、5 x 12 x 1T 華司 x 6、橡膠墊 x 2)

安裝前須知

(二) 安裝守則

1. 周圍環境(圖一)

- 抽油煙機安裝位置如在窗上或附近有太多門窗，請在開動抽油煙機前先關閉門窗。
- 建議油煙上升至25厘米以上，抽油煙機始能充份發揮抽油煙效果。

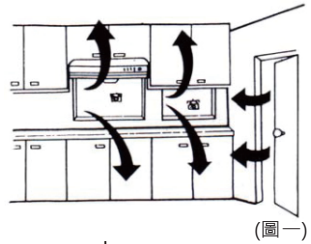


2. 安裝高度和機體位置(圖二)

- 抽油煙機安裝高度，自本機底板至瓦斯爐面之距離以 700 ± 50 毫米為最理想。
- 機體應保持左、右水平，避免油杯積油溢出。



3. 排風管(圖三)


- 排風管必須配合本機出風管接頭之直徑(6吋)及避免太多彎位，以免影響抽風效果。若為5呎出風管，請使用附件的轉換風管圈。
- 安裝前先以強力膠注入風管圈後將風管嵌入，再用強力膠接合排風管與風管圈。

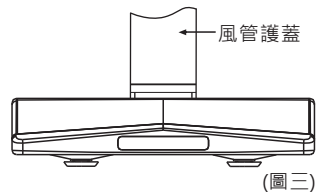

(三) 吊掛方式



1. 後吊掛-掛牆

- 使用兩支木螺絲(如果牆身物料並非木材，請使用爆炸螺絲)及兩個墊片將抽油煙機固定於牆壁面上(圖四)。

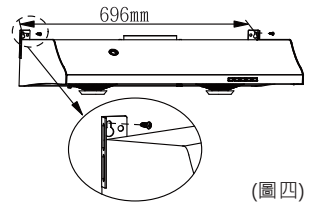

2. 上吊掛(僅ZHT910X)





- 使用四支螺絲及四個墊片，將抽油煙機固定於櫥櫃下方。先將四支螺絲鎖在櫥櫃下方，再將抽油煙機扣上螺絲後，將四支螺絲鎖緊，並確認抽油煙機牢固且不會移動(圖五)。
- 在抽油煙機頂部兩端黏貼圖型海綿墊(圖六)。(注意：必須確認抽油煙機已牢固不能移動，否則抽油煙機會有下塌風險。)

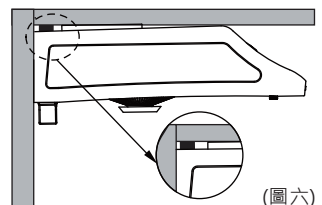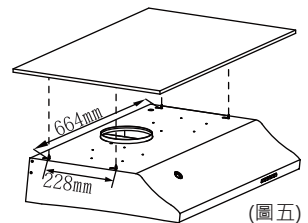

安裝前須知

(四) 安裝注意事項


1. 排氣管的理想安裝位置為於爐台正對窗戶安裝，可敲下一方玻璃，安裝一塊穿有彎管孔大的合板，排氣管由此孔穿出，絕不損壞壁面。
2. 若排風管為鑽穿牆洞，鑽洞時應要留意牆壁結構和質料，切勿破換牆洞以外之壁面。
3. 在壁面畫好鑽洞範圍，在使用電鑽鑽穿牆壁。
4. 在已選定的安裝位置上，釘上螺絲釘。
5. 調整機體兩側之掛鈎(吊鐵)，將機體懸掛於螺絲釘上。
6. 先量好彎管正對牆面位置，釘頭與牆壁間最多保持 3 毫米距離，作掛鈎之用此舉有助機身保持水平。
7. 懸掛後，機體要保持一定水平。
8. 照已選好排氣管的適當位置，選擇適當長度的直管進行裝設。
9. 機體前後請調整 2 - 4 毫米的斜度固定機體，以保持油槽運行方向順暢。

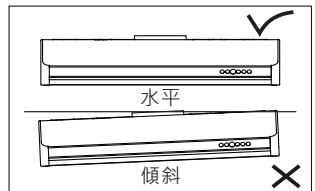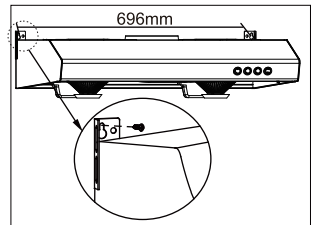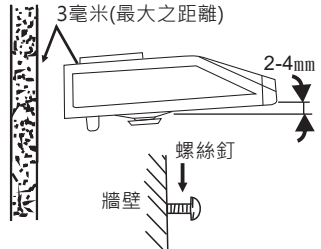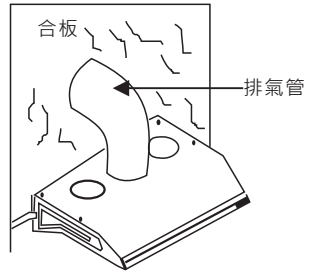

安裝水平:

抽油煙機的安裝應保持水平，防止油汙從油杯溢出來。

抽油煙機安裝位置
排風管洞鑽洞，上面兩角釘上鋼釘

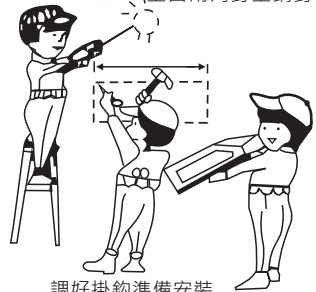







調好掛鈎準備安裝

操作介紹

ZHT910X






1.  電源/開關按鍵:
 - (1) 按壓一次開啟風扇；再按壓一次關閉風扇。
2.  電燈按鍵:
 - (1) 按第一次全亮；按第二次微亮；再按一次關閉電燈。
 - (2) 此按鍵獨立控制不受電源/開關按鍵和延遲開關按鍵影響。
3.  風速加速按鍵:
 - (1) 風速上調至高速為止，每按一次則速度遞增。
 - (2) 在風扇停止運轉時，按風速減速按鍵或風速加速按鍵即以上次關機之速度啟動。
4.  風速減速按鍵:
 - (1) 風速下調至低速為止，每按一次則速度遞減。
 - (2) 在風扇停止運轉時，按風速減速按鍵或風速加速按鍵即以上次關機之速度啟動。
5.  蒸氣清洗按鍵:
 - (1) 按下開始蒸氣清洗流程，清洗動作時燈恆亮，其餘時熄滅狀態。
 - (2) 啟動蒸氣清洗時，按風速上、下鍵皆無效。
 - (3) 缺水時，按此鍵無效並且會持續閃爍警示，直到加水為止。
 - (4) 清洗功能異常時，會啟動自動鎖定功能，所有指示燈會閃爍警示該鎖定功能啟動。
6.  延遲關機按鍵:
 - (1) 長按此鍵 啟動延遲關機功能，自動進入最低風速，啟動計時5分鐘自動關機功能，但LED燈不受影響。
 - (2) 延遲關機啟動時可變換風速上下，當執行計時中按蒸氣清洗鍵無效。
 - (3) 延遲關機啟動時按一下延遲開關按鍵，只會關閉延遲功能，按電源/開關按鍵會直接關機結束風扇動作。

保養與清潔


1. 清潔前，務必要切斷電源。
2. 定期清潔抽油煙機的內外側，可以保持抽油煙機壽命。
3. 使用螺絲起子可拆卸風扇保護網的螺絲取下保護網進行清洗。完成後，必須重新裝回原位。
4. 按逆時針方向旋轉可取下保護網的小油杯進行清潔。完成後按順時針方向旋轉，即可重新裝回。
5. 抽油煙機的小油杯可拆卸作定期清潔。
6. 在開啟煮食爐前，請先開啟抽油煙機，以免廚房溫度過高。
7. 請勿擅自對本產品進行拆卸、修理、或改造。
如需更換LED燈條，必須由合格技術人員負責進行。除專業人員外，任何維修操作均可帶來危險。

注意：ZHT910X請洽販售商購買新條燈。

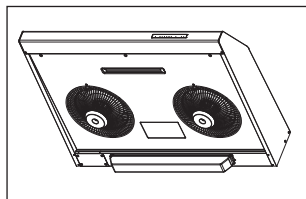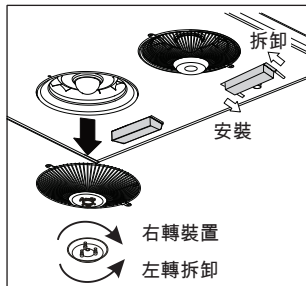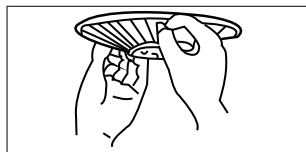

油機尺寸

ZHT910X

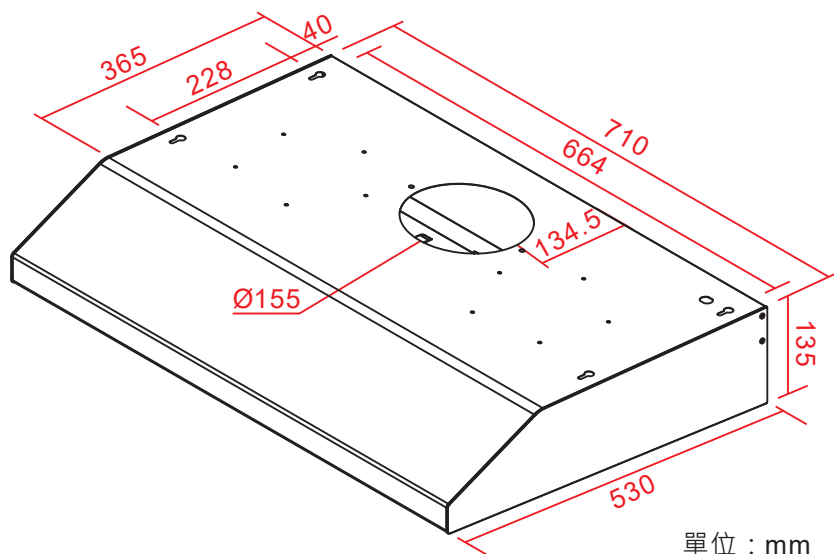


單位：mm

性能規格表

型 號	ZHT910X
淨 重	12.6 千克
毛 重	14.9 千克
機 種 尺 寸	710 x 530 x 135 mm
包 裝 尺 寸	800 x 600 x 220 mm
電 壓	220V , 50Hz
燈 膽	5W LED燈條

規格線路圖

ZHT910X

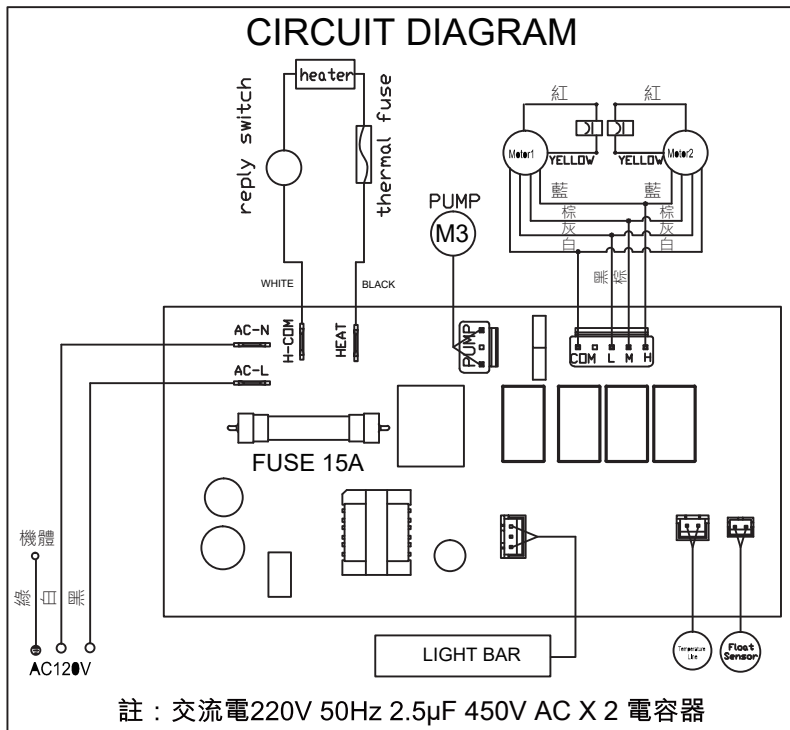

Safety Notice

Important:


For safety purpose, you should read the instructions carefully before using the appliance for the first time. Save the instruction for future reference.

The appliance is designed for domestic use and may only be installed and operated in accordance with these instructions for use.

1. Please follow the instruction in this user manual.
2. Unplug the power before doing maintenance job on the hood.
3. Wear rubber gloves when doing maintenance job on the hood.
4. Do not spray the hood with water directly.
5. When using the hood with flammable gas, please keep a good air flow in the kitchen to avoid hazard.
6. Do not burn directly under the range hood.
7. Do not share duct with other flammable gas pipes.
8. Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children without supervision.
9. There is a fire risk if cleaning is not carried out in accordance with the instructions
10. Do not flame under the range hood.
11. Accessible parts may become hot when using with cooking appliances.
12. The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
13. Regulations concerning the discharged of air have to be fulfilled.
14. If the supply cord is damaged, do not operate the appliance, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
15. The appliances is not to be used by persons (including children), with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
16. Disconnect the power supply before cleaning, repairing, replacing light bulb or dismantling the range hood.
17. The appliance should be positioned 65 – 75 cm above the cooking range.
18. The range hood must be earthed.
19. To prevent fire hazard in case of oil build-up, the turbine impellers and other easily-soiled parts must be cleaned at least twice a month.

Part List

ZHT910X

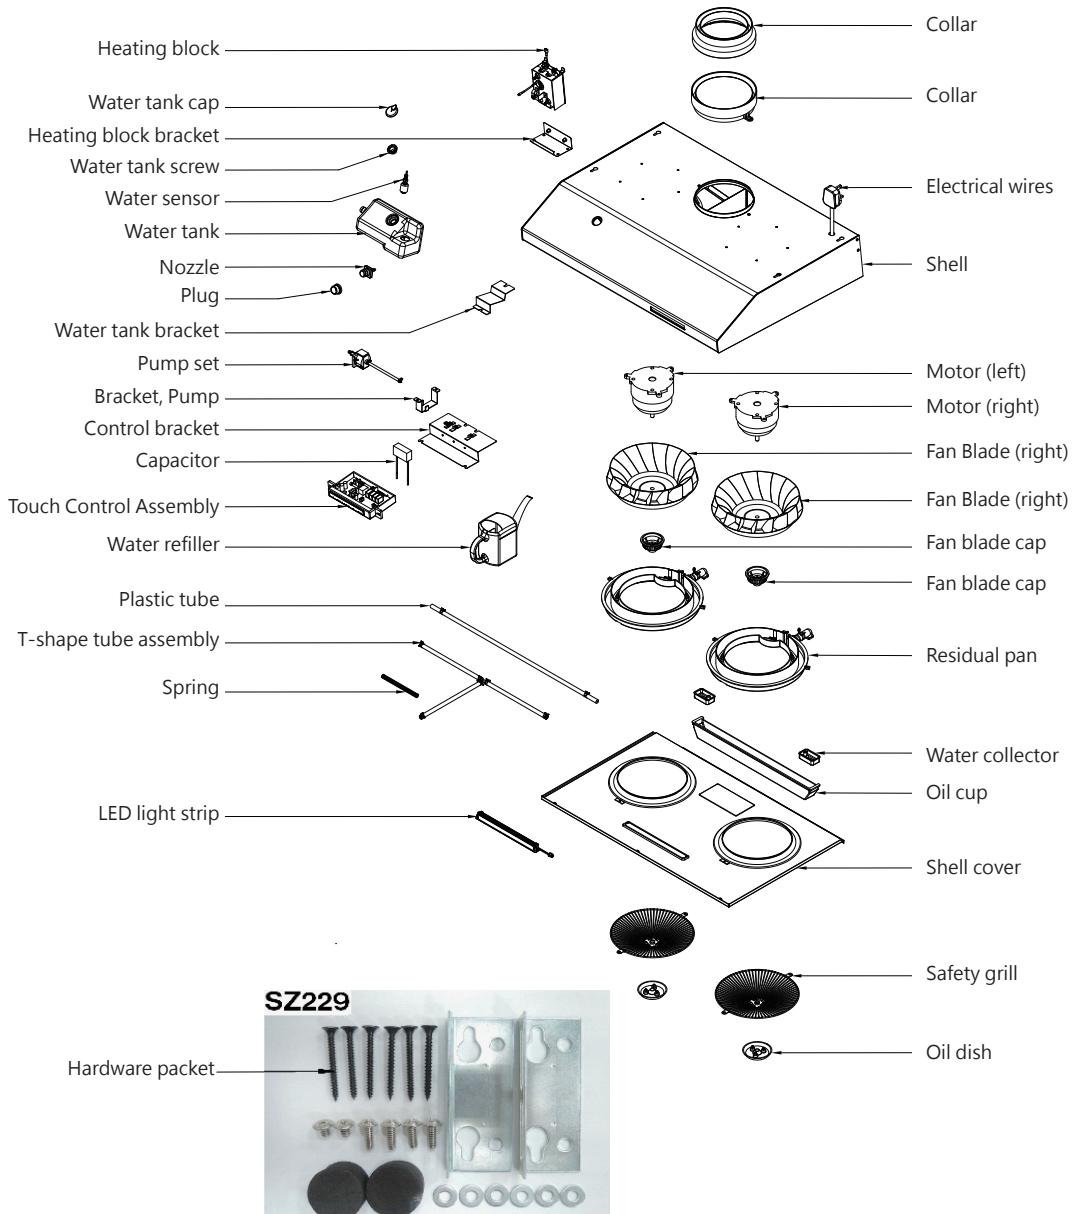

Installation Guidelines

A. Before using the hood

1. Packing materials (plastic bags, polystyrene, etc.) must be kept out of children's reach, as they are potentially dangerous.
2. Installation must be carried out by a qualified technician.
3. Check the voltage on the rating plate which should corresponds to the voltage in your home.
4. Connect the power and switch on the motors and lighting system to check the operation.
5. Check the following accessories before installation:

ZHT910X


- a. Exhaust duct adapter (6" to 6" x 1 pc, 6" to 5" x 1 pc)
- b. Detachable oil cup 1 pc, oil dish 2 pcs
- c. Instruction manual 1 pc
- d. Hardware package x 1 set (Bracket x 2 pcs, 3/16 x 1/4Washer head screw x 2 pcs, 3/16 x 1/2Washer head screw x 4 pcs, 6# 1 1/2" Wooden screw x 6 pcs, 5 x 12 x 1TWasher x 6 pcs, Rubber x 2 pcs)

Installation Guidelines

B. Installation

1. Location:(FIG. 1)

- Air turbulence is from window/door may reduce the effectiveness of hood. To suggest close window/door before use hood.
- The smoke has to rise up to 25 cm to be within the range of suction efficiency.

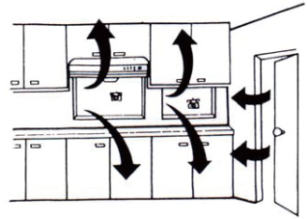

(FIG. 1)

2. Position:(FIG. 2)


- The installation height is measured vertically from center of fan grille of hood to the top of the stove.
- The minimum installation height should not be less than 650mm and the recommended height is 700±50 mm.
- Avoid left-right or front-dropped inclination.



(FIG. 2)

3. Exhaust duct:(FIG. 3)

- 6-inch diameter exhaust duct is recommended to use in order to maximize suction efficiency. In case of 5-inch exhaust duct, an adapter as enclosed in the packaging can be used.
- Before installing the hood, please apply fast drying glue to the collar and securely attach it to the top of the cooker hood's vent lid. Install the cooker hood and exhaust duct to the plastic collar and seal with fast drying glue.

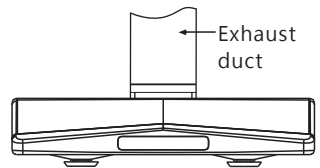


(FIG. 3)

C. Mounting Method

1. Rear mounting


- Use 2 wooden screws and 2 washers to secure the hood to the wall. (See FIG. 4)

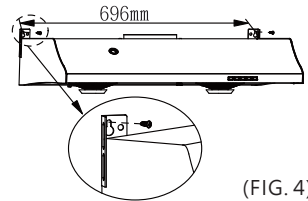

(FIG. 4)

2. Top mounting


- Use 4 wooden screws and 4 washers to secure the hood to the bottom of the cabinet. Lift hood onto screws located on cabinet bottom and lock into place. Make sure all 4 key-holes cover the screws. Tighten each screw to secure hood to cabinet. (See FIG. 5)

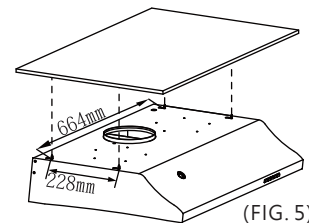

(FIG. 5)

Stick the two round rubber stands on the sides of hood's top (See FIG. 6).

(Note: Make sure all 4 key-holes cover the screws and each screw was tightened. Otherwise, there will be potential risk of machine fall down.)




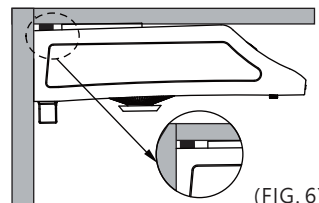


(FIG. 6)

Installation Guidelines


C. Procedure

1. Find a suitable installation position of hood which should be next to a window and can be cut to let the exhaust duct pass through.
2. If the exhaust duct has to pass through the wall, particular attention must be paid to the structure of the wall as steel reinforcement may be embedded.
3. Mark the location of exhaust outlet hole, the cut/drill the hole with care.
4. Fix the position of hood and mark the position of the two hanging hooks.
5. Drive 2 steel nails into the selected wall with 3 mm(maximum)space leave behind for hanging the hood.
6. Adjust the hanging hooks on both sides of the hood and hang the hood on the steel nails, and then adjust the hood from side to side and from front and back to a horizontal position.
7. Follow the instruction print on the enclosed exhaust duct adapter and connect the exhaust duct adapter to the hood and window /wall 5-inch or 6-inch duct can be used.
8. Fasten the hanging bracket to the wall by screws from the fixed holes to avoid of being hanged up by accident.
9. To ensure drainage performance, hood shall be installed with slope (2 - 4 mm) as shown in figure.

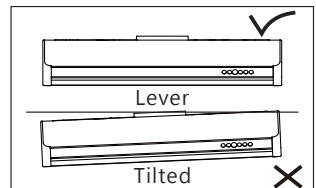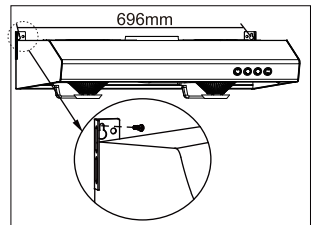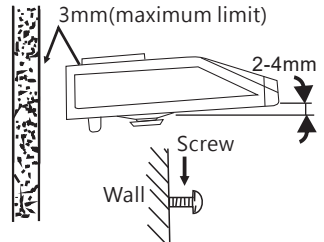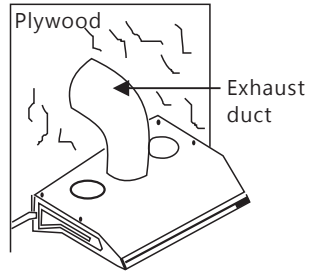

Keeps the hood in level to avoid the oil leaking from oil cup.

Drill a hole for the air tube
Drive 2 steel nails in, on the upper corner of the both side of the hood.

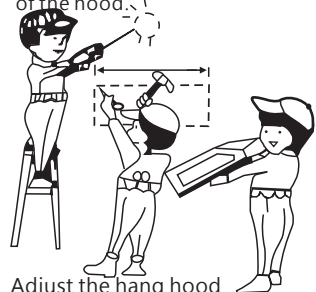







Adjust the hang hood and prepare to install

Operation Instruction




ZHT910X



1.  On/off
 - (1) Press to turn on the fans and press again to turn off the fans.
2.  Light switch
 - (1) From off, press one time for bright light. Press again for dim light. Press again to turn lights off.
 - (2) The button is not controlled by on / off and delay off.
3.  Speed up
 - (1) This button will increase the speed with each press.
 - (2) Press the speed up or speed down button when the fans are off to turn on the range hood at the last speed and light level it was last turned off at
4.  Speed down
 - (1) This button will decrease speed with each press.
 - (2) Press the speed up or speed down button when the fans are off to turn on the range hood at the last speed and light level it was last turned off at.
5.  Steam clean
 - (1) Press to start steam cleaning process, the indication light is illuminate when the range hood is cleaning.
 - (2) When steam cleaning process is operating, speed up and down buttons are not available.
 - (3) When water level is low, the steam clean button will blink to warn until water is added.
 - (4) Steam clean function will auto-locking when the function is unusual, all indication lights will blink.
6.  Delay Off
 - (1) Long Press to start the delay off function, range hood is adjusted to the lowest speed automatically, it will turn off after 5 minutes. But light is not impacted.
 - (2) Under this mode, speed can be adjusted. Steam clean function is not available.
 - (3) Under this mode, press the button again will stop the delay off function. Light will not be impacted. Press on/off button to turn off the fans.

Maintenance and Cleaning


1. Always disconnect from power supply before cleaning.
2. Clean both exterior and interior of the hood long lasting.
3. Fan safety grill can be detached for cleaning by removing the screws with a screwdriver. It must be reinstalled after cleaned.
4. Oil dish on the grill can also be detached for cleaning by turning the dish anti-clockwise.
5. The oil cup in the centre of the hood for holding grease can be detached and cleaned regularly.
6. Make a habit to turn on the hood before using stove to avoid high heat in the kitchen.
7. Never dismantle, repair, or modify the appliance by yourself. Repair service including replacement of LED light must only be carried out by qualified technician. It is dangerous for anyone other than the above mentioned people to perform replace service.

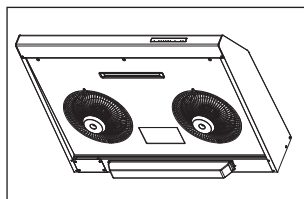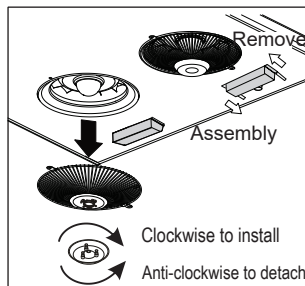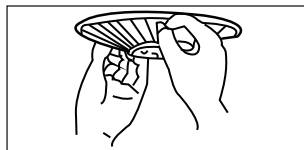

Please contact distributors for the LED strip for ZHT910X.

Hood Measurement

ZHT910X

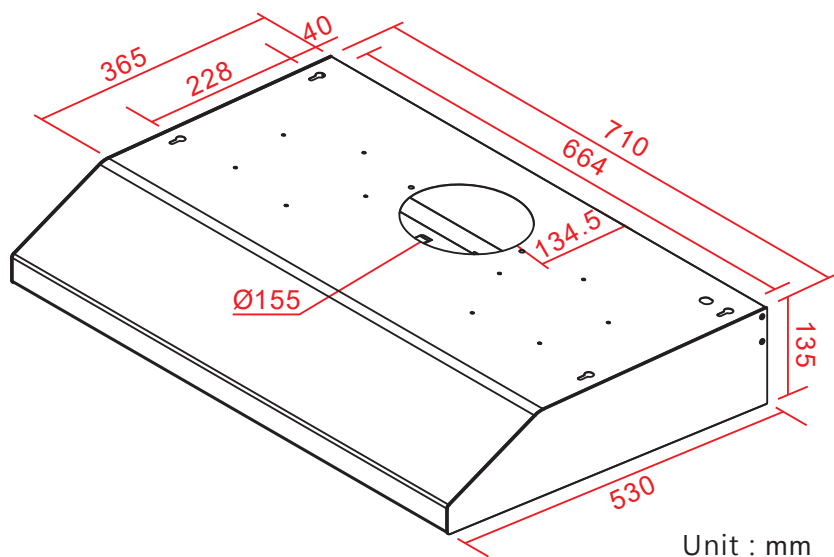

Specification

Model	ZHT910X
Net Weights	12.6 KGs
Gross Weights	14.9 KGs
Hood Size	710 x 530 x 135 mm
Packing Size	800 x 600 x 220 mm
Voltage	220V , 50Hz
Light Bulb	5W LED strip

Wiring Diagram

ZHT910X

